 


EX-25 Electric Stapler (XS-0751000H)

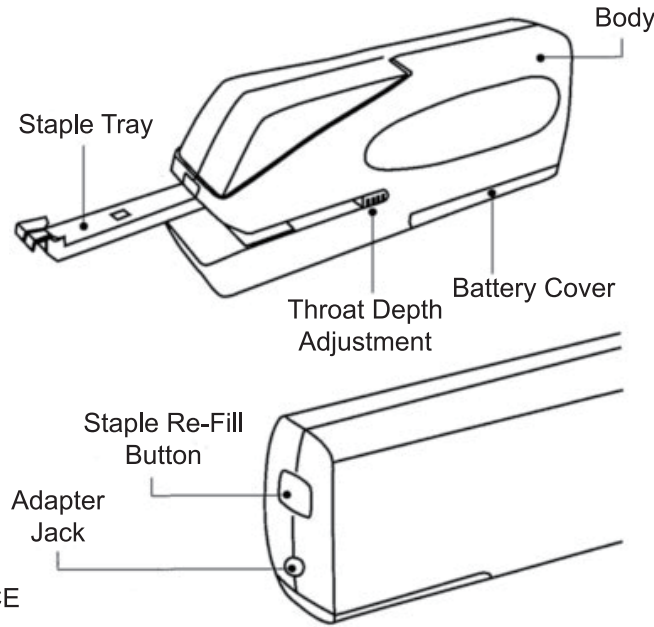

Register your Lifetime Warranty at
www.Live-Eco.com

- PLEASE READ THIS OWNERS MANUAL BEFORE USE
- PLEASE KEEP THIS MANUAL FOR FUTURE REFERENCE



Specification

BODY SIZE	L 7" x W 1.9" x H 2.8"
WEIGHT/MATERIALS	12.2 ounces (without batteries) / ABS Body
POWER OPTIONS	6 x Alkaline Batteries (sold separately) 7.5V AC Power Adapter (included)
STAPLE LOAD CAPACITY	210 Standard 1/4" Staples (26/6 or 24/6)
LOADING SYSTEM	Front Loading
STAPLING DEPTHS	From .25" to 1.5" by 1/10" intervals
MAX SHEET CAPACITY	25 Sheets of Standard Weight Paper
BATTERY LIFE	Batteries last up to 8,000 Staple Instances

CAUTION

 
- Do not try and remove papers while motor is engaged.
- Do not drop or cause shock to the stapler body.
- Do not staple non paper materials or cardboard.
- Do not attempt to use stapler without paper.
- Remove batteries if not using for extended time.
- Do not store the stapler in extreme heat, cold, high humidity or dusty environments.

Instructions

1 Battery Installation

1) To remove battery cover, slide the battery cover backwards.

2) Please ensure positive (+) and negative (-) sides are correctly placed.

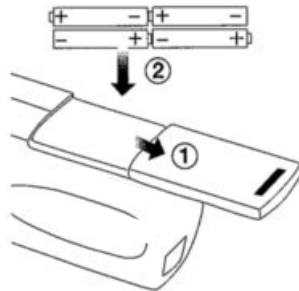

ATTENTION

*PLEASE USE DRY ALKALINE BATTERIES ONLY

*DO NOT USE OLD BATTERIES OR MIX OLD BATTERIES WITH NEW ONES



*EXAMPLES OF NON DRY ALKALINE ARE NICKEL CADMIUM & MAGNAM BATTERIES

1) Press the "PUSH" button. The staple tray will pop out just enough to grab.

 
2) Next, PULL the tray all the way out to load a full-strip of staples. (Don't be afraid to pull hard if necessary)

3) Once staples are loaded, push staple tray in until it "clicks" into place.

JAMMING

IN CASE A JAM DOES OCCUR, PRESS THE "PUSH" BUTTON AND REMOVE FAULTY STAPLES. IF BATTERIES ARE LOW OR OUT OF POWER, FRONT LOADING TRAY MAY NOT POP OUT. IN THIS CASE, REPLACE WITH FRESH BATTERIES OR USE AC ADAPTER.


2 Re-Filling Staple Tray

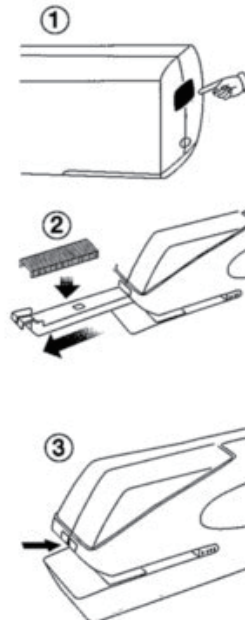

3 Using Your Stapler

Adjust stapler depth guide to preferred depth.

 Then slide papers to the back of the stapling slot to trigger stapler and ensure accuracy.

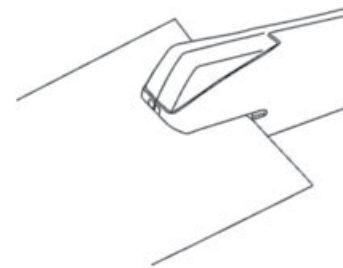

MAX 25 SHEETS

MAXIMUM OF 25 SHEETS OF STANDARD WEIGHT PAPER CAN BE STAPLED AT ONE TIME. WITH BRAND NEW BATTERIES YOU CAN STAPLE UP TO 8,000 TIMES BEFORE NEEDING BATTERY REPLACEMENT.

ADJUSTABLE STAPLING DEPTH

STAPLING DEPTH CAN BE ADJUSTED FROM .25" TO 1.5" IN 1/10" INTERVALS. GRASP THE GUIDE ON EACH SIDE TO ADJUST.

Need Help? Contact us: www.Live-Eco.com
or at Support@Live-Eco.com
We will reply same or next day!